



Angle Mounted Master Cylinder Bleeding Procedure

Application All angle-mounted master cylinders.


Problem Unable to obtain a firm brake pedal when bleeding master cylinder on vehicle

Cause Air trapped in the upper end of the master cylinder past the secondary port.


Solution When bleeding brakes system, raise rear of vehicle until master cylinder bore is level as shown below.

CAUTION: Some fluid should be removed from the reservoir to avoid spilling as vehicle is raised.

Air becomes trapped here

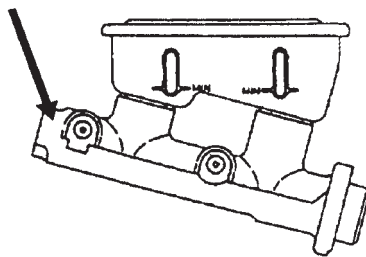

Normal mounted master cylinder

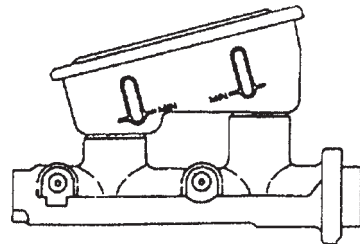

Correct bleeding position

Note Always flush entire brake system with approved fluid when any brake component is replaced.